



OPERATION MANUAL



**PORTABLE SPEAKER
SYSTEM**

X-731

Congratulations on your purchase of the REAL-EL speaker system!**COPYRIGHT**

© 2022. ENEL GROUP OU.

This Manual and information contained in are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

CONTENTS

1. BUYER RECOMMENDATIONS	1
2. PACKAGE CONTENTS	1
3. SAFETY PRECAUTIONS	2
4. TECHNICAL DESCRIPTION	2
5. CONNECTION AND OPERATION	3
6. TECHNICAL SPECIFICATIONS	5

1. BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm, which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card. Make sure the warranty card has a shop stamp, a legible signature or the seller's stamp and purchase date, and the goods number corresponds to that in the warranty card. Remember: in case of warranty card loss or discrepancy of numbers you forfeit the right for warranty repairs.
- Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.

2. PACKAGE CONTENTS

- Portable speaker system — 1 pc
- USB to Micro USB power cable — 1 pc
- User manual — 1 pc
- Warranty card — 1 pc

3. SAFETY PRECAUTIONS

- Do not open the portable speaker system (PSS) and do not perform repairs by yourself. Service and repairs should be performed only by qualified specialists at authorized service centers. The list of authorized service centers is on www.real-el.com
- Make sure that foreign objects do not get inside the holes of the PSS.
- Protect the PSS from high humidity, water and dust.
- Protect the PSS from heating: do not place it closer than 1 m from a heat source. Do not expose it to direct sunlight.
- Do not use any chemical agents for cleaning. Clean it with dry soft cloth only.
- In case of PSS does not work properly. Please contact place of purchase or service center.

 
Special features

 
- Playback via Bluetooth
- TWS function. Connect two speakers together
- Built-in FM radio
- USB, Micro SD (TF)
- AUX connection for use with PC, TV and other sources
- Extended battery life
- Passive radiators for more expressive bass
- Built-in microphone for handsfree mode
- LED display

4. TECHNICAL DESCRIPTION

Control panel

- ① Indicator.
- ② Charging DC 5V.
- ③ Power ON/OFF.
- ④ TF CARD: TF/micro SD card slot.
- ⑤ AUX: 3.5 mm mini-jack for audio signal connecting (phone, MP3 player, etc.).
- ⑥ USB port.

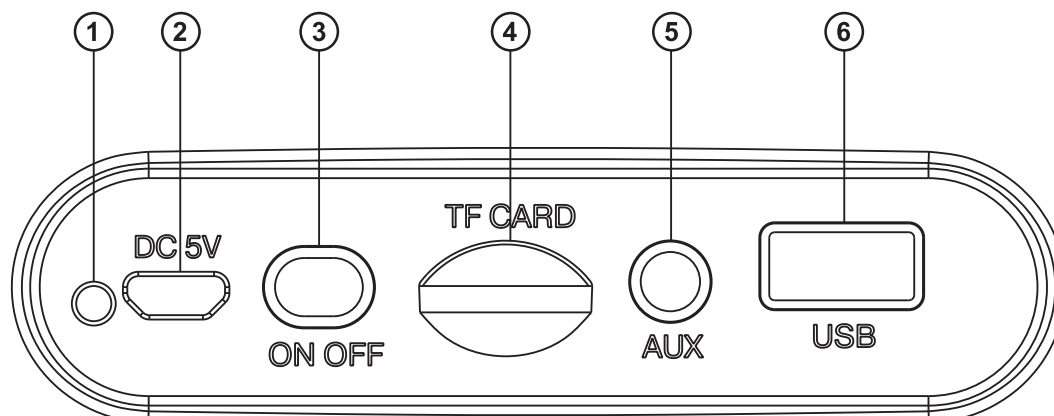

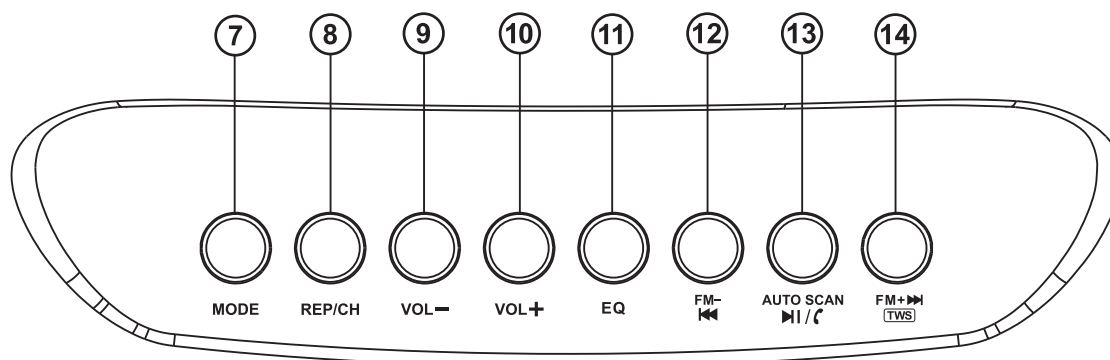

- ⑦ MODE: Bluetooth/FM/AUX/USB/Micro SD (short press).
- ⑧ REP/CH : Button for switching between stations or frequency (in Radio mode);
Disconnect from the device (long press Bluetooth mode);
Switch playback mode (ALL, ONE, RANDOM):
ONE – Repeats the current track;
RAND – Play tracks in the random order;
ALL – Plays all tracks in the sequential order.
- ⑨ VOL-: Volume decrease button.
- ⑩ VOL+ : Volume increase button.
- ⑪ EQ: Sound effect mode.
- ⑫ FM- / ◀◀ : Previous track (in Player mode);
Previous station (in Radio mode).
- ⑬ AUTO SCAN / ▶▶ / ⏸ : Play/Pause button (in Player mode);
Start/Stop auto scan (long press in Radio mode);
Call control button (long press in Bluetooth mode);
Mute (short press).
- ⑭ FM+ ▶▶ / TWS : Next track (in Player mode);
Next station (in Radio mode);
Connect an additional speaker (long press Bluetooth mode only).

5. CONNECTION AND OPERATION

Charging the battery

- Before operation, fully recharge the battery. The charger is not included. Charge this device with a DC 5V universal charger with output current 2 A.
- Insert the charging cable into the charger connector, connect the other end to the charger, the charging indicator will be activated. The red charging indicators will light up until in full charge.
It is not recommended to leave the device for a long time connected to the charger after it is fully charged.

Do not charge the speaker at low ambient temperatures. The minimum charge temperature is at least 10 °C.

Bluetooth mode

 
- Turn the unit into Bluetooth mode with the «MODE» button repeatedly until «BT» appears on the display. After 2-3 seconds the device will go into search mode.
- Select a Bluetooth device search mode on the audio source (mobile phone, tablet, etc.). The display will show the name «REAL-EL X-731» which need to establish a connection. After a successful connection, the loudspeaker will sound a signal.

TWS mode (connecting two systems in stereo at the same time)

Connection is possible only in Bluetooth mode

- Turn on both speakers in Bluetooth mode.
- Connect the signal source to one of the speakers, the other speaker must be in Bluetooth signal search mode.
- On the other speaker (which need to connect), press and hold the FM+ ►► (TWS) button.
- If the two speakers are successfully connected to each other, TWS will be activated.

Bluetooth

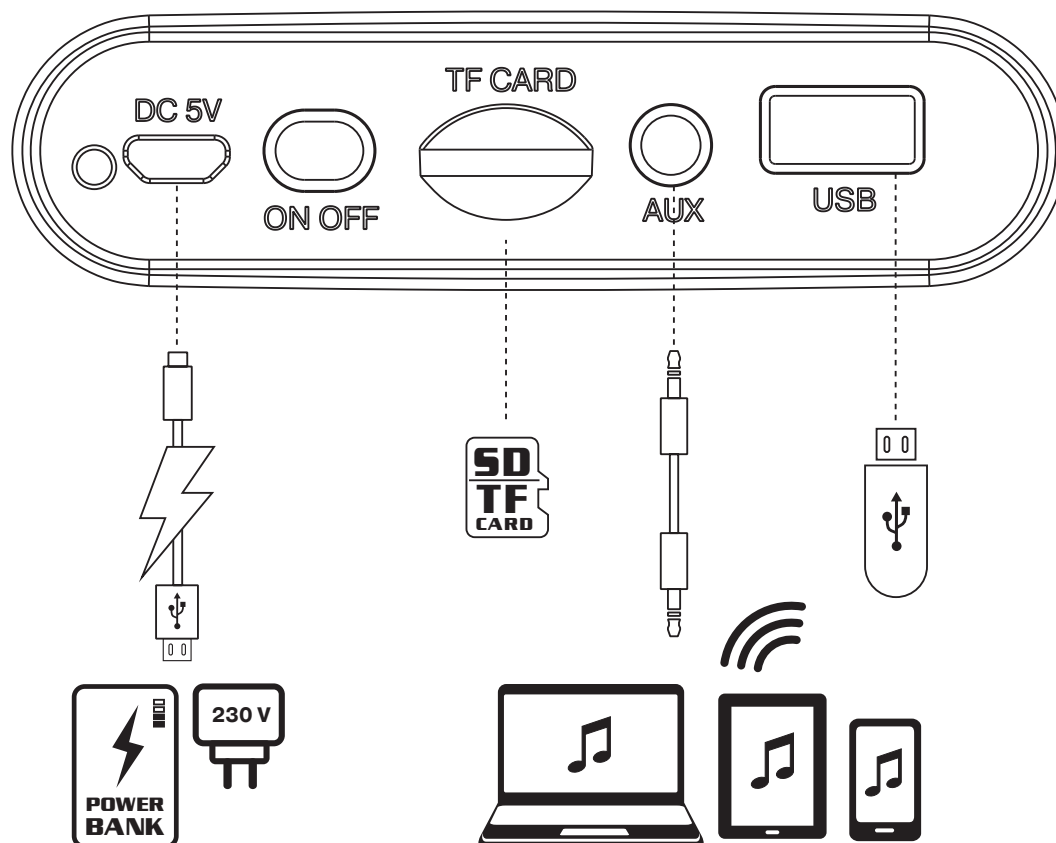

FM mode

- **FM mode requires external antenna. Use AUX cable 3.5 mm mini-jack as antenna for radio mode.**
- Turn the FM mode with the «MODE» button repeatedly until the frequency of the radio station appears on the display.
- In the playback mode, long press the "AUTO SCAN / ►I/◄" button to automatically search FM stations and save them automatically. Press the "◄◄" or "►►" buttons to switch between stations.

Playback mode

- Insert a SD card or USB flash drive into the corresponding slot, the audio track will be played automatically. In the playback mode, briefly press the "◄◄" or "►►" button to select the desired tracks.
- Press the "►I" button to play or pause.

Note: During Bluetooth playback mode, if you insert a SD card or USB, Bluetooth will be turned off and USB or SD card will play. Press the «MODE» button to return to Bluetooth mode again.

The USB port is designed for connecting USB storage media only. Do not use this connector for charging purposes, as this may cause damage of the speaker.

AUX mode

- For compatible music devices, use an audio cable with the 3.5 mm mini jack supplied in the box. Connect the cable to the audio input of the AUX and to any audio source with a 3.5 mm mini jack the screen will display LINE automatically. Or you can choose this by «MODE» button.

Use AUX cable as antenna for radio mode.

Note: You must turn off the power button "OFF / ON." If the system is not used for a long time.

6. SPECIFICATION

Parameter	Value
Output power (RMS)	18 (2 x 9) W
Frequency range	100-20 000 Hz
Dimension of the speaker drivers	2 x Ø102 mm
Supported Bluetooth Profiles	HSP, HFP, A2DP, AVRCP
Connection types	Bluetooth / AUX / USB / Micro SD
Power supply	micro USB / 5 V DC, 2 A
Battery	lithium-ion battery, total capacity of battery elements 3600 mAh @3.7 V
Bluetooth operation distance	up to 10 m
Case material	ABS plastic
Dimensions of the product	390 × 190 × 160 mm
Weight	1.75 kg

Notes:

- *Technical specifications given in this table are supplemental information and cannot give occasion to claims.*
- *Technical specifications and package contents are subject to change without notice due to the improvement of REAL-EL production.*



The product complies with all applicable requirements for Restriction of Hazardous Substances (RoHS). Packing, batteries, electronic and electrical equipment and their accessories should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities or place of purchase.



Hereby, Enel Group OÜ, Aruküla tee 55A, Jüri alevik, Rae vald, Harjumaa, Estonia, 75301, declares that the radio equipment type Radio-Frequency peripheral is in compliance with Directive 2014/53/EU. EU declaration of conformity is available at the following internet address: www.real-el.com

Manufacturer: ENEL GROUP OÜ, Harju maakond, Rae vald, Jüri alevik, Aruküla tee 55a, 75301, Estonia. ® Registered Trademark of ENEL GROUP OÜ. Estonia.