



USER MANUAL



**PORTABLE
SPEAKER SYSTEM**

X-711

Congratulations on your purchase of the REAL-EL products!

COPYRIGHT

© 2024. ENEL GROUP OU.

This Manual and information contained in are copyrighted. All rights reserved.

TRADEMARKS

All trademarks are the property of their legal holders.

CONTENTS

1. BUYER RECOMMENDATIONS	1
2. PACKAGE CONTENTS	1
3. SAFETY PRECAUTIONS	2
4. TECHNICAL DESCRIPTION	2
5. CONNECTION AND OPERATION	3
6. TECHNICAL SPECIFICATIONS	4

1. BUYER RECOMMENDATIONS

- Unpack the device carefully. Make sure there are no accessories left in the box. Check up the device for damage; if the product was damaged during transportation, address the firm, which carried out the delivery; if the product functions incorrectly, address the dealer at once.
- Check up the package contents and availability of the warranty card.
- Do not switch on the speaker system immediately after you bring it into a room from environment with negative temperature! After unpacking, the speaker system should be kept in conditions of room temperature for at least 4 hours.
- Before installing and using the speaker system, read this Manual carefully and keep it for future reference.

2. PACKAGE CONTENTS

- Portable speaker system — 1 pc
- USB power cable — 1 pc
- User manual — 1 pc
- Warranty card — 1 pc

3. SAFETY PRECAUTIONS

- Do not open the device and do not perform repairs by yourself. Service and repairs should be performed only by qualified specialists at authorized service centers. The list of authorized service centers is on www.real-el.com
- Make sure that foreign objects do not get inside the holes of the device.
- Protect the device from high humidity, water and dust.
- Protect the device from heating: do not place it closer than 1 m from a heat source. Do not expose it to direct sunlight.
- Do not use any chemical agents for cleaning. Clean it with dry soft cloth only.
- In case of device does not work properly. Please contact place of purchase or service center.


Special features

- IPX 3 waterproof
- TWS function. Connect two speakers together
- Hands-free mic
- RGB illumination
- Bluetooth
- USB input

4. TECHNICAL DESCRIPTION

Control panel

- ① Backward (short press in Player mode); Mode button Bluetooth/USB (long press);
- ② Power ON/OFF (long press); Play/Pause (short press in Player mode).
- ③ USB Port.
- ④ Type-C Charging port.
- ⑤ Forward (short press in Player mode); TWS connection. Connect/disconnect an additional speaker (long press in Bluetooth mode).
- ⑥ Volume control +/-.

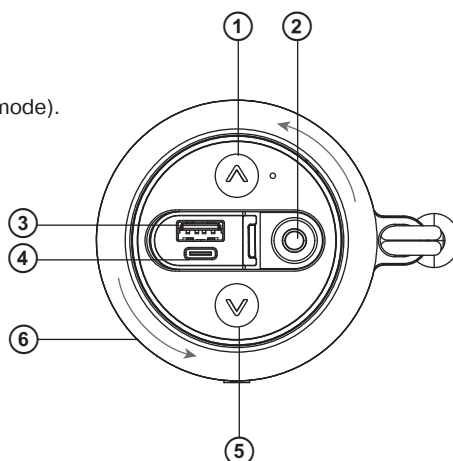

5. CONNECTION AND OPERATION

Charging the battery

- Before starting operation, the battery must be fully charged. The charger is not included. Charge this device with a DC 5V/ 2A universal charger or with a computer.
- It is not recommended to leave the device connected to the charger for a long time after it is fully charged.


Do not charge the speaker system at low ambient temperatures.

Bluetooth mode

- After turning on, the device will go into search mode.
- Select a Bluetooth device search mode on the audio source (mobile phone, tablet, etc.). The display will show the name «REAL-EL X-711» which need to establish a connection with. After a successful connection, the loudspeaker will sound a signal.

TWS Bluetooth connection

- Turn on two identical «REAL-EL X-711» systems and activate Bluetooth mode.
- On one system, press and hold the Ⓢ button at the same time to enter TWS connection mode.
- Connect the system to an audio source.
- To disconnect TWS mode, press and hold the Ⓢ button at the same time.

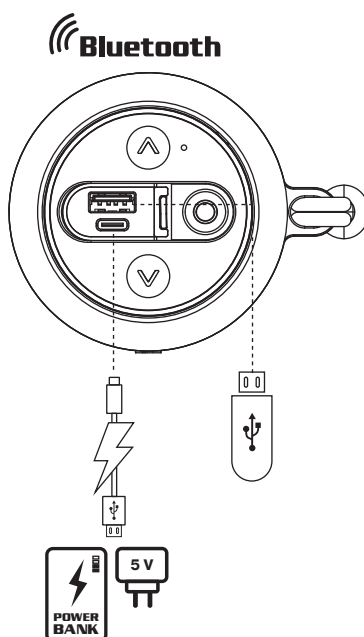

USB playback mode

- Insert the USB flash drive into the corresponding slot, the sound track will be played automatically.

Note:

During Bluetooth playback mode, if USB is connected, Bluetooth will be disabled and USB playback will start. NO POWERBANK FUNCTION.

The USB connector is designed for connecting USB storage media. Do not use this connector to charge other devices - this may cause the speaker system to malfunction.

Hand-free call

- Under Bluetooth connection status, if there is an incoming call, short-press ② button to accept the call or long-press ② button to reject the call.
- During the call, long-press ② button to switch to talking on the phone.
- Short-press ② button or operate on mobile phone to end the call.

Reset settings

- If the device does not respond, press both button ① and ⑤ for about 5 seconds to restore factory settings.

6. SPECIFICATION

Parameter	Value
Output power (RMS)	10 (2 x 5) W
Frequency range	80-18 000 Hz
Dimension of the speaker drivers	2 x Ø 50 mm (2 ")
Supported Bluetooth Profiles	V5.4 + A2DP / AVCTP / AVDTP / AVRCP
Connection types	USB / Bluetooth
Power supply	USB Type C / 5 V DC
Battery	Lithium-ion 1800 mAh, DC 3.7 V
Bluetooth operation distance	up to 10 m
Case material	ABS plastic
Dimensions of the product	Ø 78, 200 (h) mm
Weight	0.6 kg

Notes:

- *Technical specifications given in this table are supplemental information and cannot give occasion to claims.*
- *Technical specifications and package contents are subject to change without notice due to the improvement of REAL-EL production.*



The product complies with all applicable requirements for Restriction of Hazardous Substances (RoHS). Packing, batteries, electronic and electrical equipment and their accessories should not be disposed of with household waste. Wherever possible, they should be segregated and brought to an appropriate collection point to enable recycling and avoid potential impacts on the environment and human health. For more information, contact your local authorities or place of purchase.



Hereby, Enel Group OÜ, Aruküla tee 55A, Jüri alevik, Rae vald, Harjumaa, Estonia, 75301, declares that the radio equipment type Radio-Frequency peripheral is in compliance with Directive 2014/53/EU. EU declaration of conformity is available at the following internet address: www.real-el.com

Manufacturer: ENEL GROUP OÜ, Harju maakond, Rae vald, Jüri alevik, Aruküla tee 55a, 75301, Estonia. ® Registered Trademark of ENEL GROUP OÜ. Estonia.